



Operating Instructions for Quartz Cuckoo Clocks

Please read this operating instructions carefully before handling your clock.

- Turn the hands clockwise till they point to 12 o'clock.
- Open the back cover and insert 2 (for clocks with music 3) batteries type „Baby“ as indicated in the battery holder.
Pay attention to + and -.
- Hang the clock on the wall and fix the pendulum.
- Turn the minute hand clockwise till the clock tells the correct time.
IMPORTANT: Let the cuckoo strike every full hour!
- If the time shown on the clock does not correspond with the number of cuckoo strikes, please proceed as follows:
e.g.: cuckoo strikes twice → turn the hour hand clockwise to II
e.g.: cuckoo strikes 9 times → turn the hour hand clockwise to IX
- Use the button „Push“ for moving the cuckoo strike by 1 hour.
- You can set the volume of the cuckoo strike with the switch on the right side. You can choose between „max“, „min“ or „off“.
- There is a light sensor above the number XII on the dial, that switches off the cuckoo strike automatically at night.
- If the bird's door does not open or close anymore or if the clock is running too slow, the batteries must be exchanged.

Enjoy your Quartz Cuckoo Clock!

Haus der 1000 Uhren • Weisser GmbH
Am Bach 23
78098 Triberg
Germany

Telefon + 49 (0)77 22/96 30 -0
Telefax + 49 (0)77 22/96 30 -21
E-Mail office@1000uhren.com
www.houseof1000clocks.com

Bank / Bank account
Volksbank Triberg eG
BLZ 694 91700
Konto 60 025 100
BIC GENODE61TRI
IBAN DE57694917000060025100